




INMP31N


Industrial LED Torch




Alkaline
Battery



Waterproof
and Dustproof



Anti-
corrosion




Impact
Resistant



Alkaline Battery

Description

- Widely used for inspection, emergency repair and construction emergency lighting etc. in industrial area and professional industry.
- The body is made of high performance nylon. It features as lightweight, anti-aging, anti-corrosion, impact-resistant and easy to carry.
- Professional optical lens design, soft illumination, uniform spot, in line with GB 30734 fire protection standard.

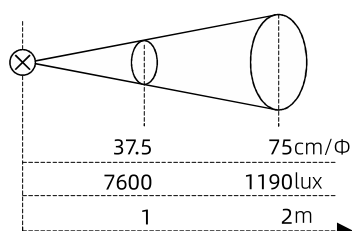

Parameters

Certification:	CE
Working ambient temp.:	$-40^{\circ}\text{C} \leq T_a \leq +55^{\circ}\text{C}$
Ingress protection:	IP66/67
Corrosion-proof grade:	WF2
Rated voltage:	3×1.5V
CCT:	6500K
Luminous flux:	≥200lm (strong mode), ≥100lm (work mode), ≥100lm (SOS mode)
Run time:	≥9h (strong mode), ≥11h (work mode)
Beam distance:	≥174m (strong mode), ≥106m (work mode)
Battery type:	3×LR6AA (IEC60086)
Lifespan:	50,000 h (without battery)

Features





The transparent cover is formed by two-color injection molding of high-transparency and chemical-resistant high performance nylon. Professional optical lens offer better light distribution.





Large button, designed for industrial use, is made of durable, chemical-resistant nylon.



Dual power supply module design
Exchangeable / Tool free
Gold-plated contacts, effective electrical connection.



Order specifications

Illustration	Description	Weight (g)	Order No.
	Industrial LED Torch	195	INMP31N
	Industrial LED Torch (with magnetic)	210	INMP31N-M





Installation diagram



Magnetic type. It can be adsorbed on the metal frame, freeing your hands when working.

The belt clip is used to buckle the torch. It is 360° adjustable and easy to plug in and out.

Spare parts

Illustration	Description	Weight (g)	Order No.
Magnetic holder 	/	15	1000/11-01-05-IN
Belt clip 		42	1000/11-01-01
Alkaline battery 	1.5V (IEC60086)	24	LR6AA

Outline dimension (unit: mm)

