




WirelessHART®

HART-IP™

DevCom2000

Smart Device Communicator


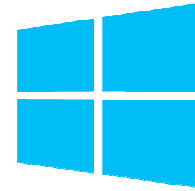


Benefits:

- Perform complete HART® device configurations using your Windows Desktop, Laptop, or Tablet PC
- Uses the registered DD files from the FieldComm Group
- Complete access to all features of the device DD including Methods
- Monitor PV, Multi-variables, and Device Status
- View and edit device Variables
- The most cost-effective DD based HART communication solution available!

Features:

- Windows Explorer menu layout
- Device menu structure easy to navigate
- Get to the information you want quickly
- Communication and Event Logs
- Save configurations as text file and PDF file for documenting the device
- Write saved configurations to devices
- Trend process variables as well as any other parameter associated with the device
- Complies with the Enhanced DDL standard (IEC 61804-3)
- Supports HART 7, WirelessHART® devices, and HART-IP
- Comes with ALL the latest registered DD's from the FieldComm Group
- No tag limits!

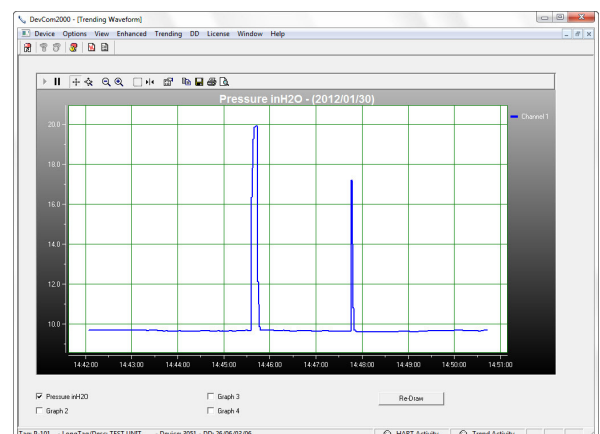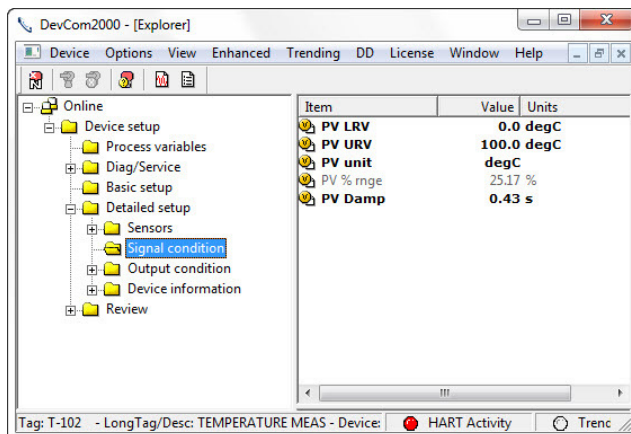

Sample Screen Shots (DevCom2000 Explorer and DevCom2000 Trend Display)



Specifications:

System Requirements (minimums)

Operating System	Windows XP (Note: supports Windows versions 7 to 10)
Processor Speed	Pentium, 600 Mhz
Memory	256 MB
Hard Disk Space	1.6 GB
Monitor	256-color VGA
Communication Port	USB, RS232, Bluetooth, or Ethernet
HART Modem	ProComSol HM-USB-ISO, HM-BT-BAT-ER, HM-RS232-ISO, or equivalent

Device Descriptions (DD's)

DD Library	Included
Generic DD	Included
Current Library	HCF Release 2018 No. 4 (contact us for latest data)
DD Updates	Quarterly updates for 1 year free Download updates with subscription service

Functions

- Monitor PV
- Monitor Multi-variables
- Monitor Device Status
- View and Edit Variables
- Save complete device configuration to text file and PDF file
- Write saved configurations to devices
- Sample Execute Methods:
 - Trims
 - Calibrations
 - Loop Tests
 - Zero and Span

ProComSol, Ltd

Process Communications Solutions

Phone: 216.221.1550

Toll Free: 877.221.1551

Email: sales@procomsol.com

Web: www.procomsol.com